

FIG. 1

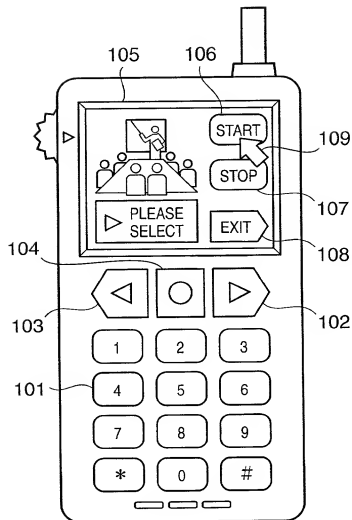


FIG. 2

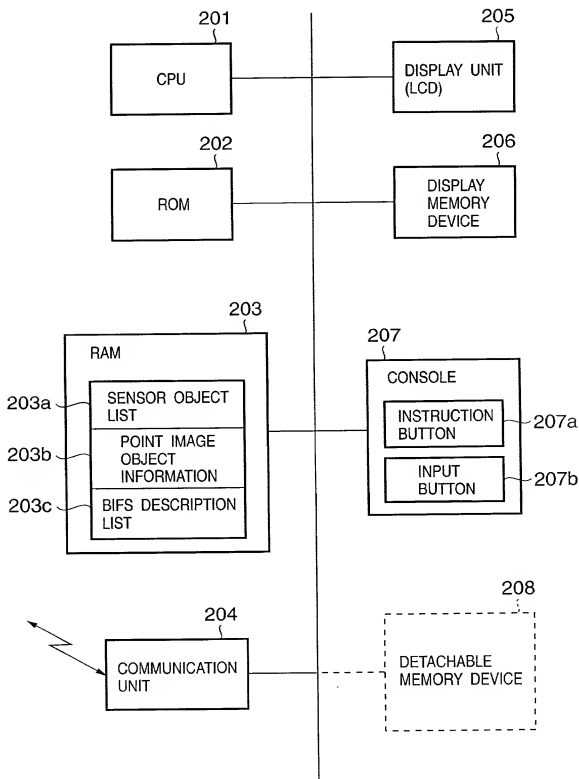


FIG. 3

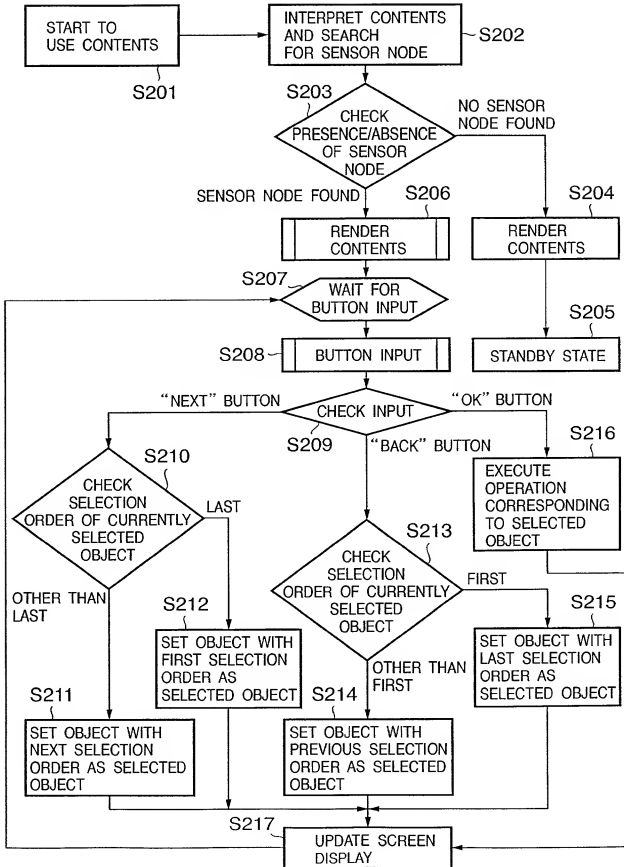


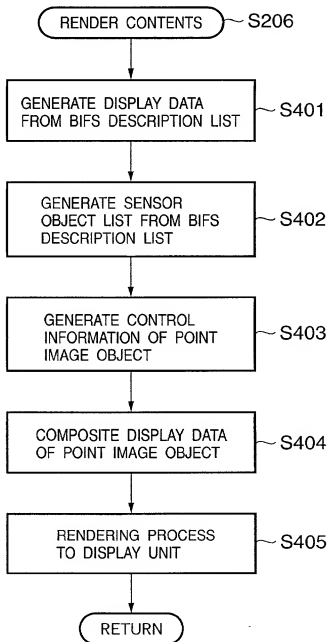
FIG. 4

FIG. 5

203a

BUTTON NAME	X-COORDINATE	Y-COORDINATE	TYPE OF BUTTON
START BUTTON	5	30	TOUCH SENSOR
STOP BUTTON	5	45	TOUCH SENSOR
MENU BUTTON	5	70	ANCHOR

203b

POINT IMAGE OBJECT INFORMATION		SELECTION POINTER
X-COORDINATE	Y-COORDINATE	PROCESSING INSTRUCTION INFORMATION
5	30	START MOVING IMAGE
5	45	STOP MOVING IMAGE
5	70	MENU DISPLAY

FIG. 6

